




Bathtub faucet + sprayer

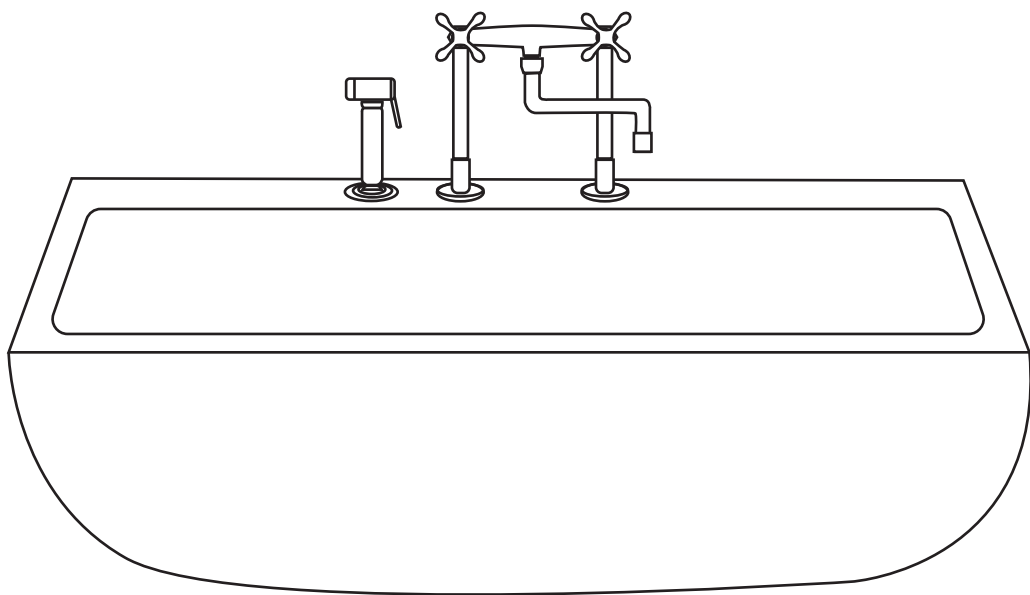


BRASSNA

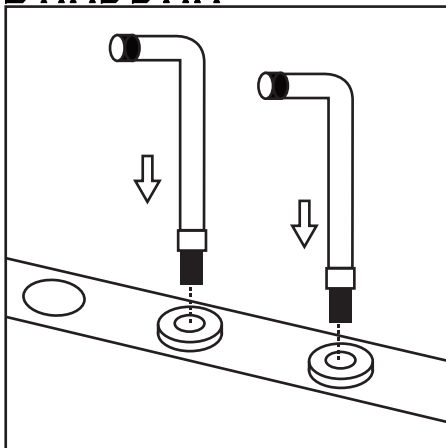

1. Insert horizontal bracket into the bottom of the 2 top risers, slide up to the desired level and tighten screws, insert flange on bottom risers
2. Apply Teflon tape to both ends.
3. Connect the faucet body to the legs. And then connect the hand shower holder to the faucet body.
4. Connect the hand shower hose to the holder and hand shower.
5. From above the floor apply a bead of silicon based caulking to the bottom of the flange and press the floor to form a water proof barrier.
6. While holding a bucket at the outlet of the supply lines, open each handle and let water run for 30 seconds, check for leaks.

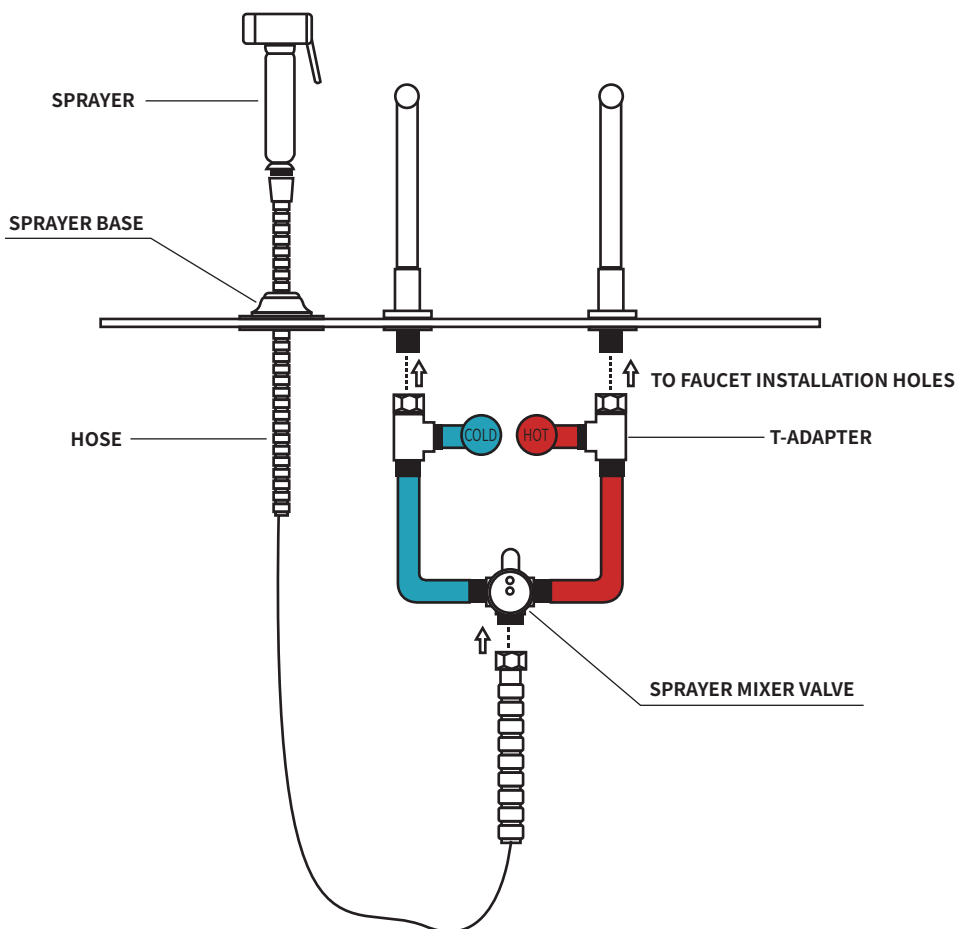

BRASSNA

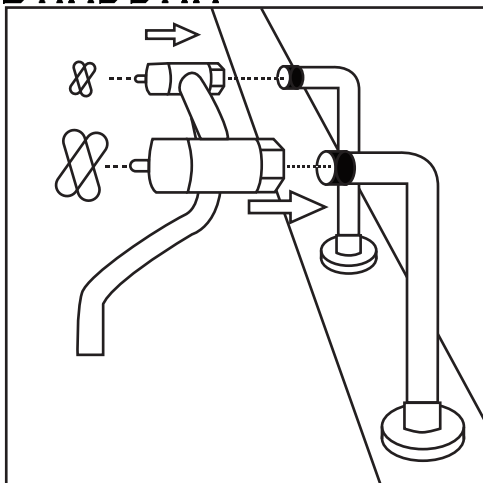

7. Insert rubber washer into the faucet inlet and thread onto the supply lines.

8. Open both supply lines and let the water run from the hose as well as the spout for at least 1 minute, check for leaks.

Warning!!!

- Do not put any weight, step, or hang on any part of this faucet, this may damage the faucet and cause water damage.
- This faucet was tested and meets ASME/ANSI standards of operation and torque tension: do not use pneumatic or electrical tools for its installation, as this may inadvertently over tighten the connection or attachment hardware of this faucet.
- It is recommended that the tub be situated in an area where the supply lines are not exposed to foot traffic, bumping into the supply lines may damage them and potentially cause a leak.

